
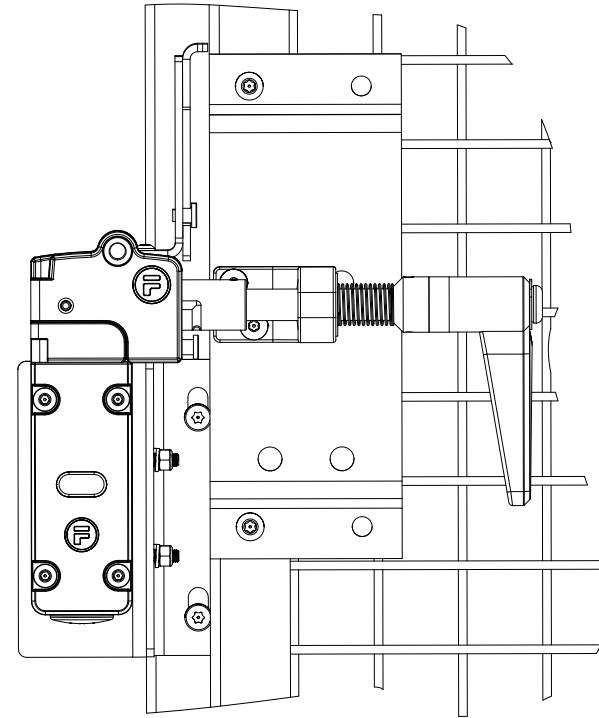


WireCrafters


Fortress AMSTOP Installation Instructions

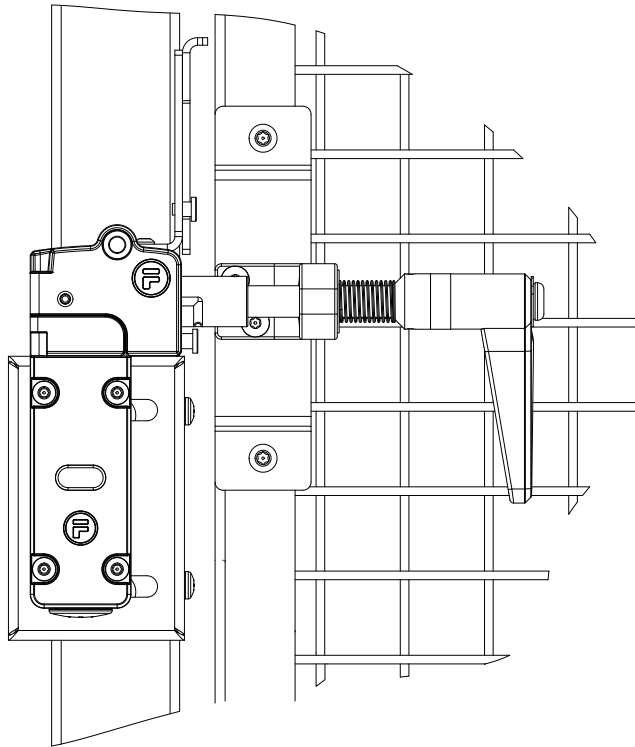


INCLUDED IN THIS MANUAL

Description	Page
Recommended Tools	2
Hinge Door Hardware Pack	3
Hinge Door Handle Install	4
Hinge Door Switch Body Install	5
Slide Door Hardware Pack	6
Slide Door Handle Install	7
Slide Door Switch Body Install	8
Thank You	9

We're Here To Help
1-800-626-1816

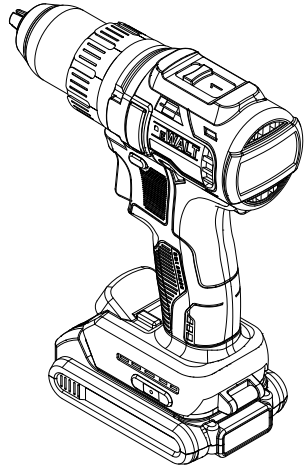


Cordless Drill

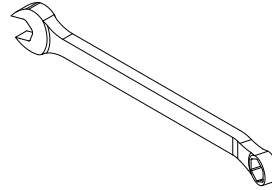

7/16" Wrench
8mm Wrench
13mm Wrench



7/16" Socket
8mm Socket
13mm Socket



Ratchet




5/16" Drill Bit




T27 Torx Tamper Resistant Bit
(Included with Hardware)



T25 Torx Tamper Resistant Bit
(Included with LKAMSTOP024)

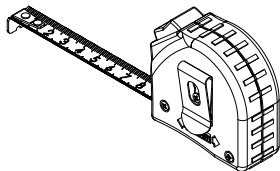


Tape Measure

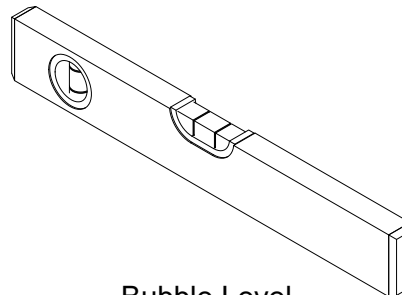


Bubble Level




Marking Tool

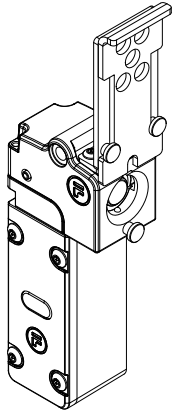


LKAMSTOP024
Switch Body

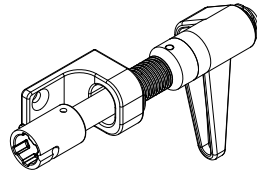

LKAMSTOP024
Handle

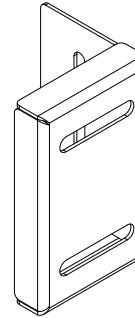


ILAMHDSWBKT
HD Switch Body Bracket




ILAMHDACTBKT
HD Handle Bracket

Fasteners

Qty.	Part Number	Description
2	FS1434BHTRTSSS	1/4" x 3/4" BH Tamp Res Torx SS Screw
2	FS5M16MFHTRSSS	5mm x 16mm Tamp Res Torx FH SS Screw
2	FS121RHTRSDSS	#12 x 1" SD Tamper Resistant SS Screw
2	FS14FW	1/4" Flat Washer Zinc Plated
2	FS5MLW	5mm Lock Washer Zinc
2	FS5MLN	5mm Lock Nut
4	FS8M16M	8mm X 16mm Hex Head Cap Screw Zinc
4	FS8MLW	8mm Lock Washer Zinc
1	FSTXBITT27	Torx Security Bit T27
2	SUD14LN	1/4" Lock Nut

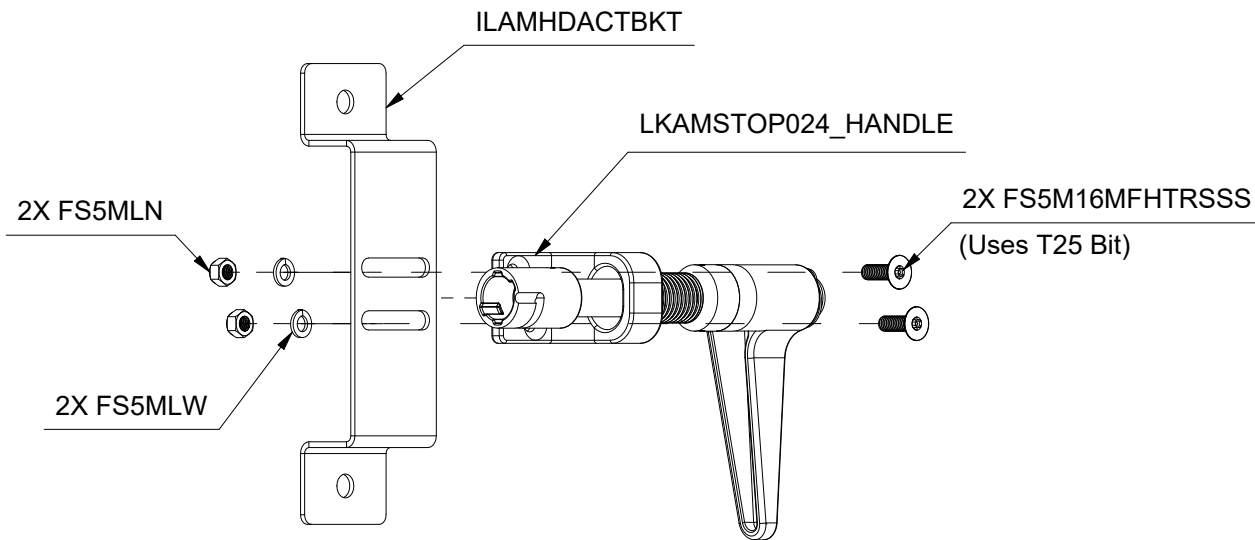


STEP 1.

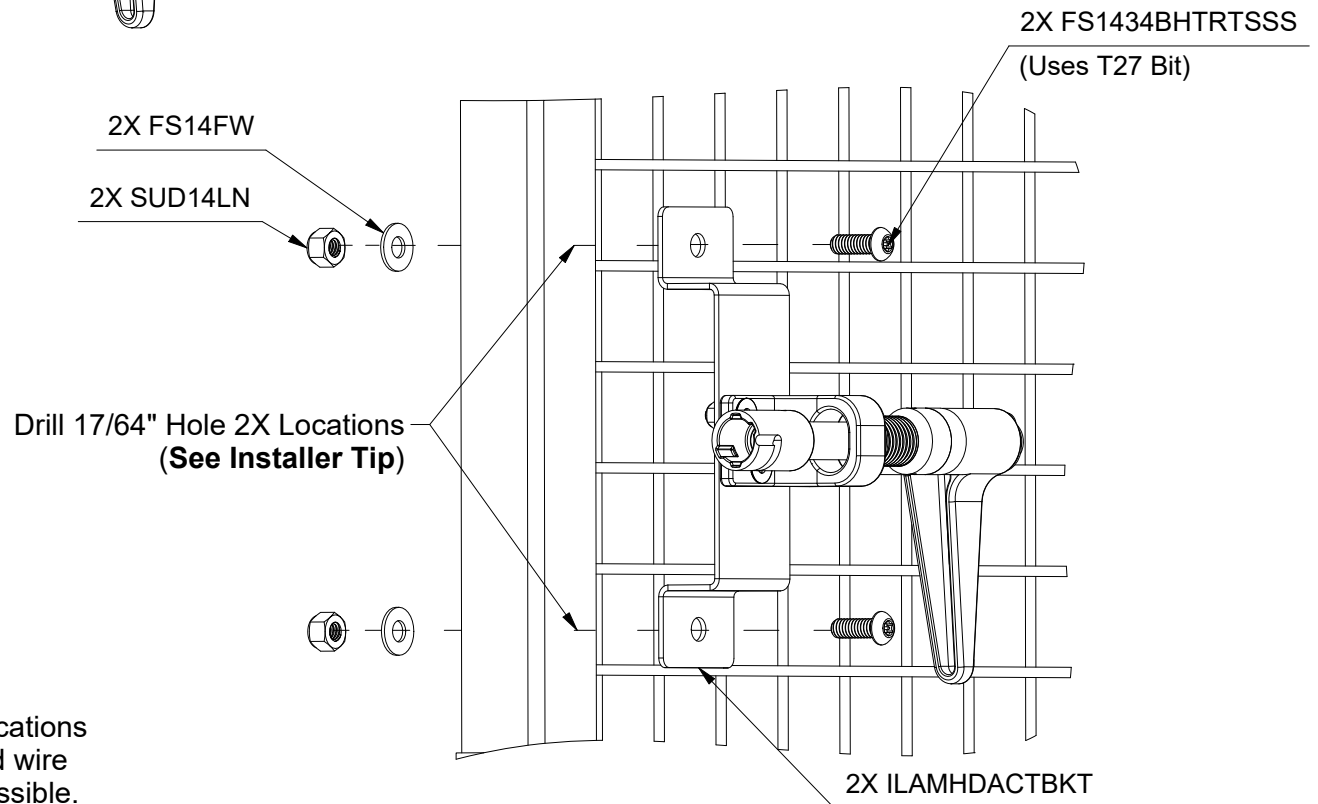

Installer Tip:


Prior to drilling, position and mark the hole locations for mounting of the ILAMHDACTBKT to avoid wire intersections on the interior of the door as possible.

STEP 2.

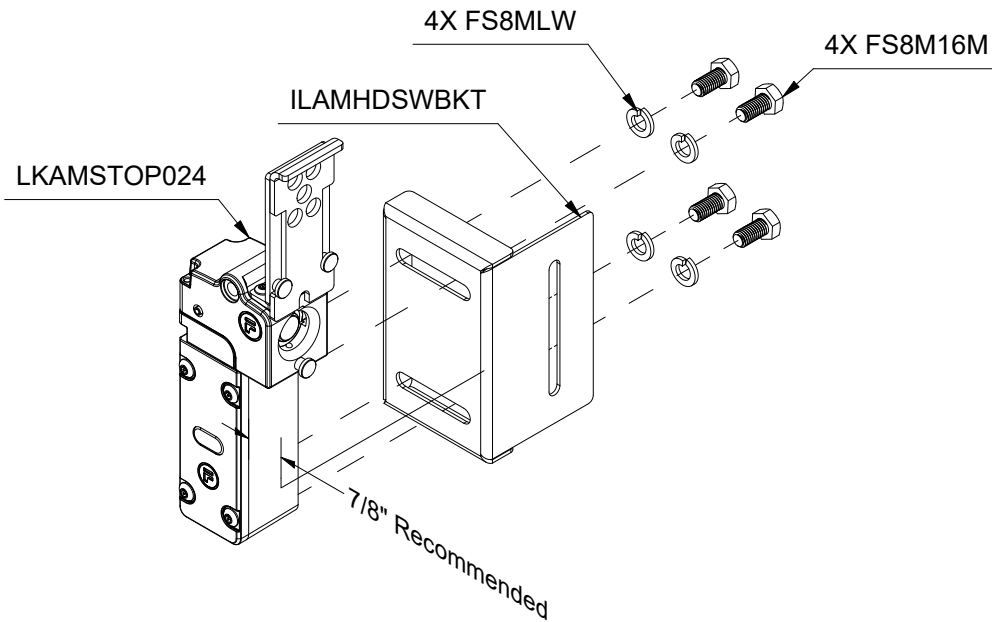


STEP 3.


Align the LKAMSTOP024 / ILAMHDSWBKT with the LKAMSTOP024 Handle and mark its position.

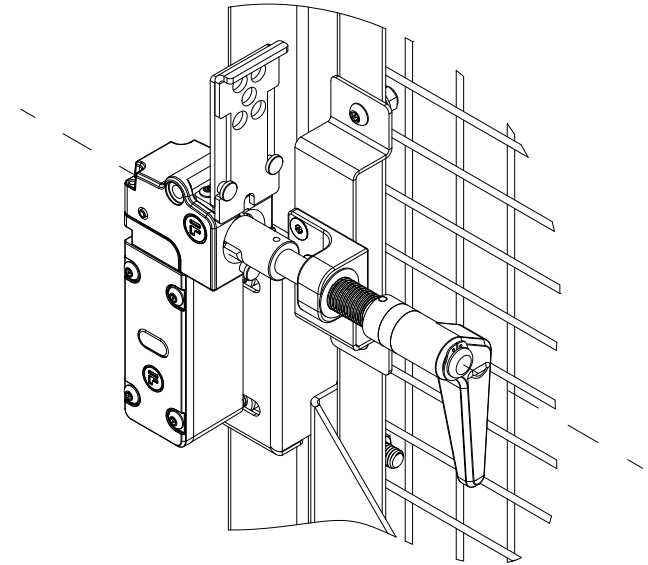


STEP 4.

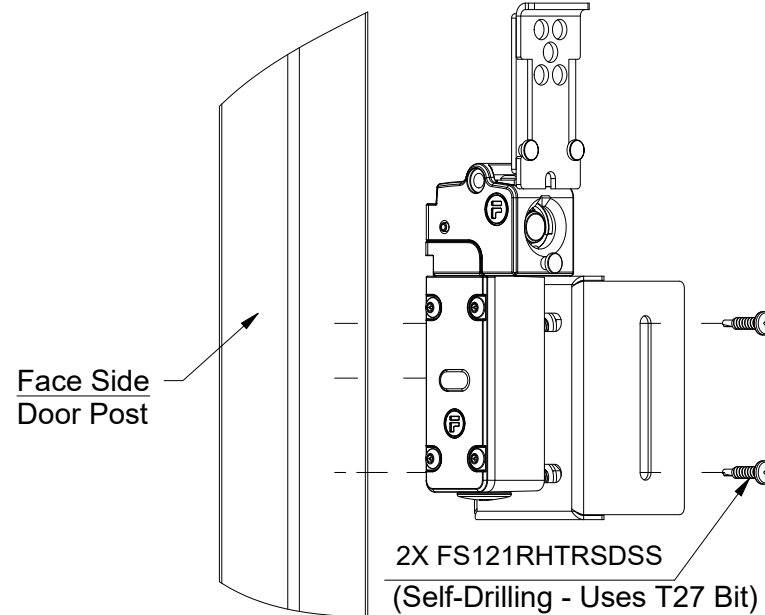


STEP 5.

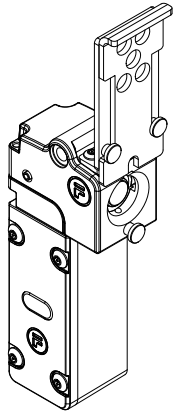


LKAMSTOP024
Switch Body

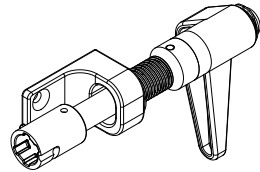

LKAMSTOP024
Handle

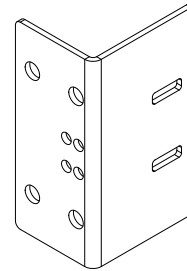


SDILPA
Slide Door
Interlock Plate "A"

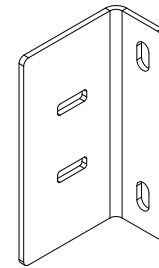


SDILPB
Slide Door
Interlock Plate "B"

Fasteners

Qty.	Part Number	Description
2	FS1434BHTRTSSS	1/4" x 3/4" BH Tamp Res Torx SS Screw
2	FS5M16MFHTRSSS	5mm x 16mm Tamp Res Torx FH SS Screw
2	FS5M16MBHTS	5mm x 16mm BTN HD Torx Screw
2	FS121RHTRSDSS	#12 x 1" Round HD Tamper Resistant SS Screw
2	FS14FW	1/4" Flay Washr Zinc Plated
4	FS5MLW	5mm Lock Washer Zinc
4	FS5MLN	5mm Lock Nut
4	FS8M16M	8mm X 16MM Hex Head Cap Screw Zinc
4	FS8MLW	8mm Lock Washer Zinc
1	FSTXBITT27	Torx Security Bit T27
2	SUD14LN	1/4" Lock Nut

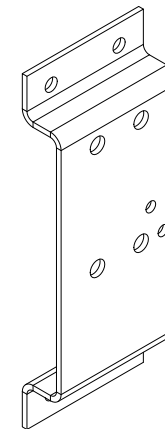

SDILP138
Slide Door
Interlock Plate "C"

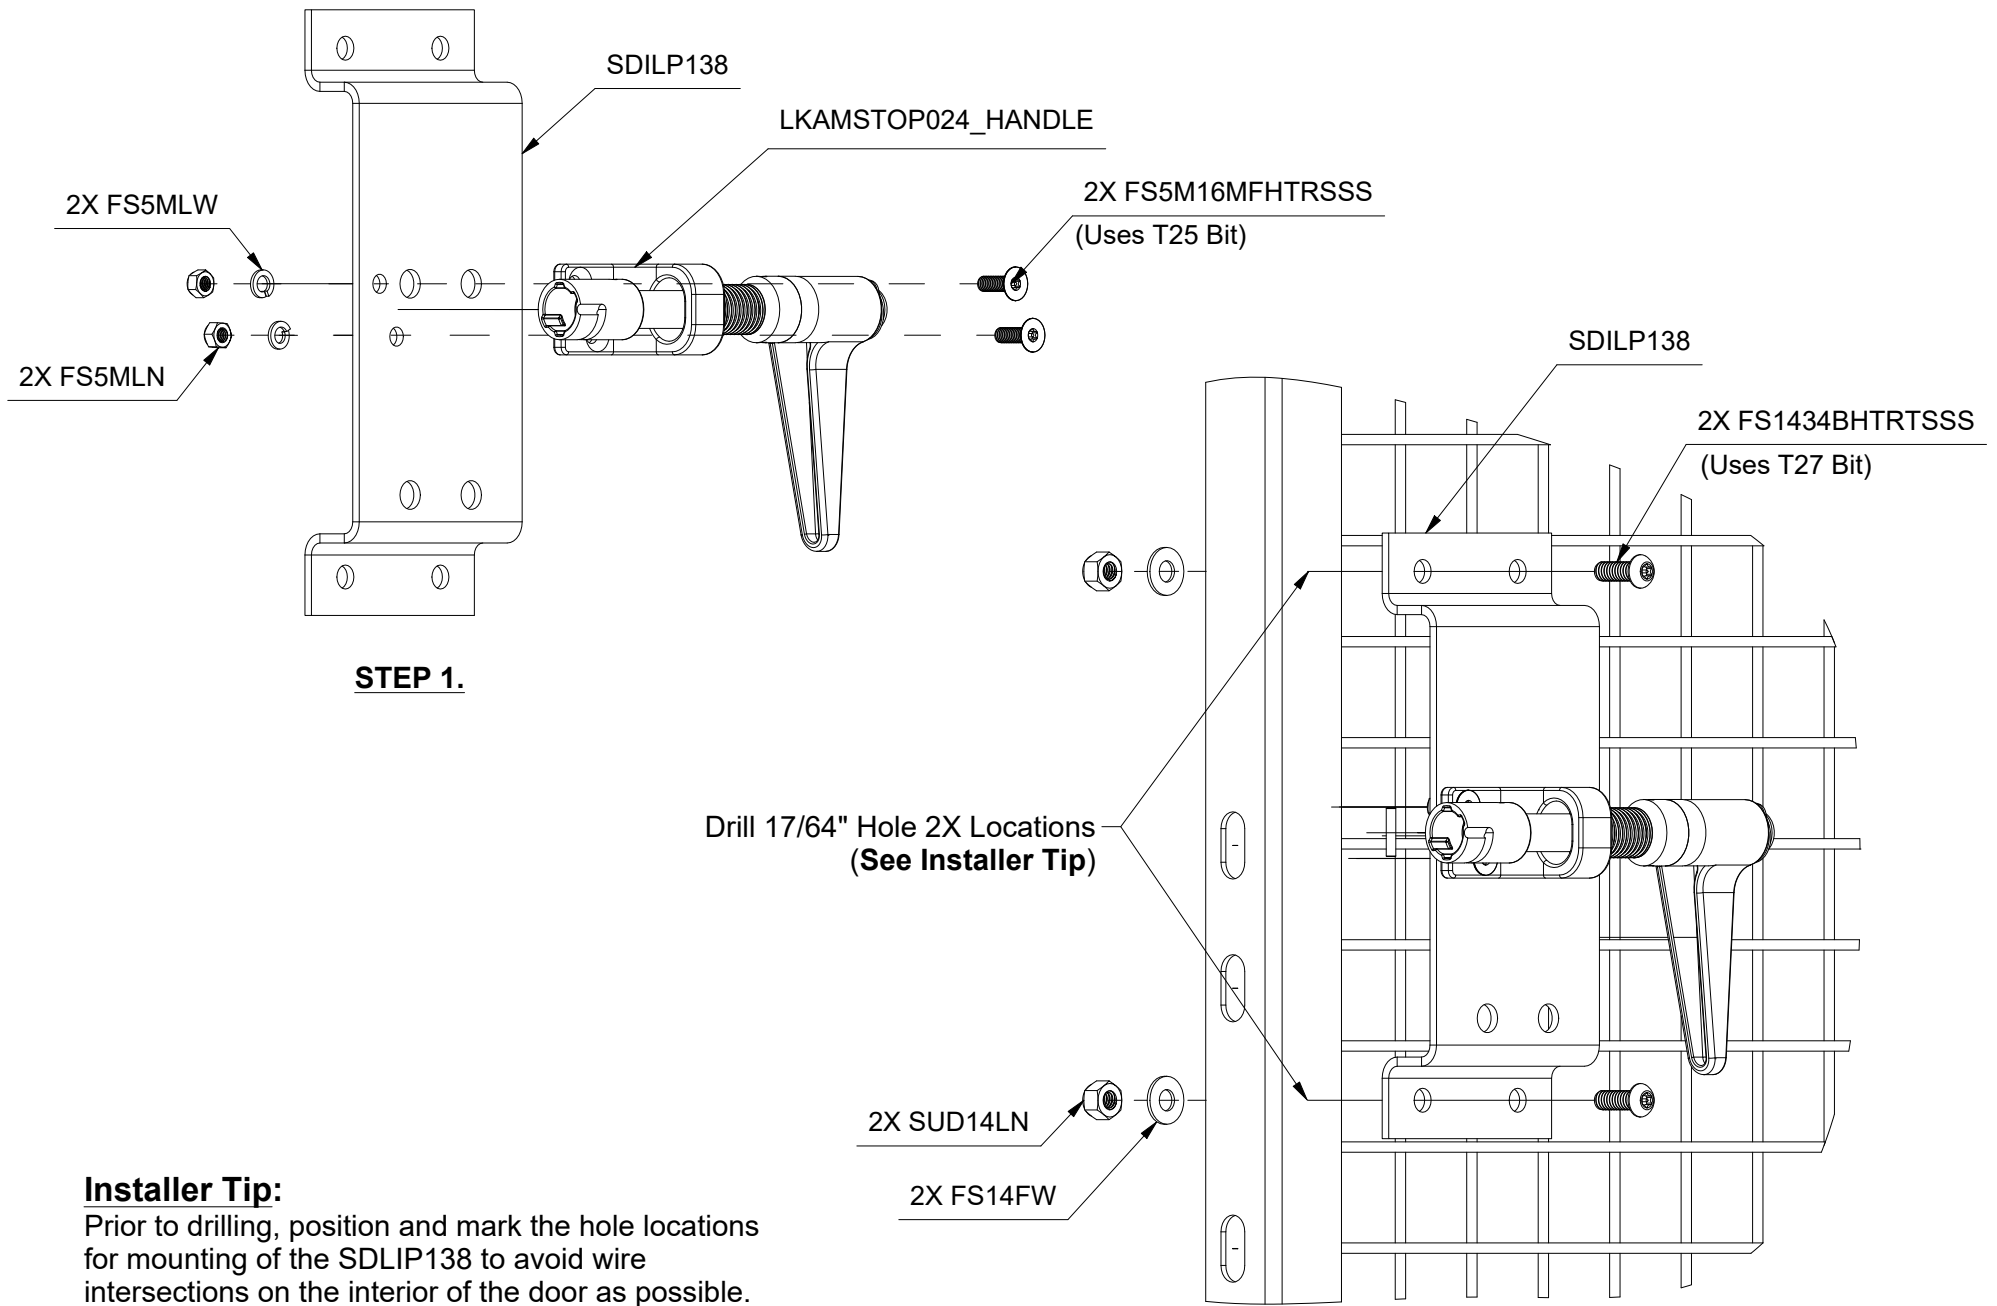


Installer Tip:

Prior to drilling, position and mark the hole locations for mounting of the SDILP138 to avoid wire intersections on the interior of the door as possible.


WireCrafters

Slide Door Switch Body Install

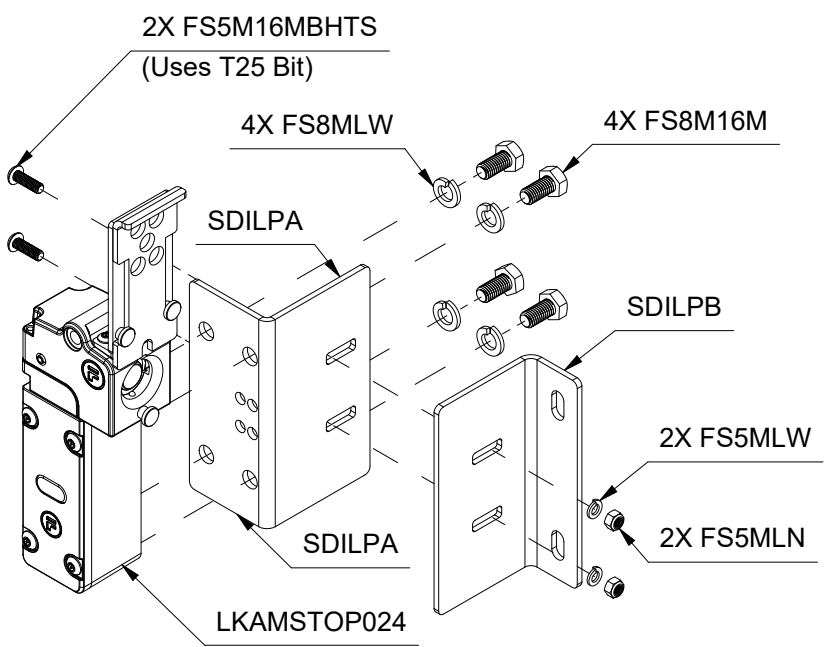


STEP 3.

Align the LKAMSTOP024 with the LKAMSTOP024 handle and mark its position.

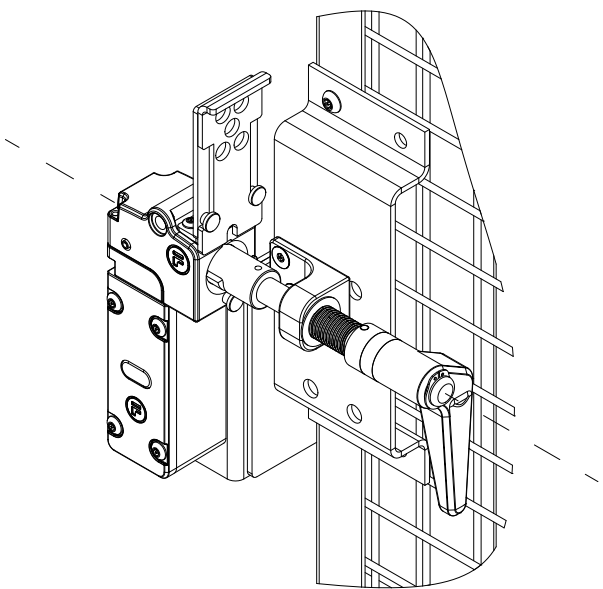

STEP 4.

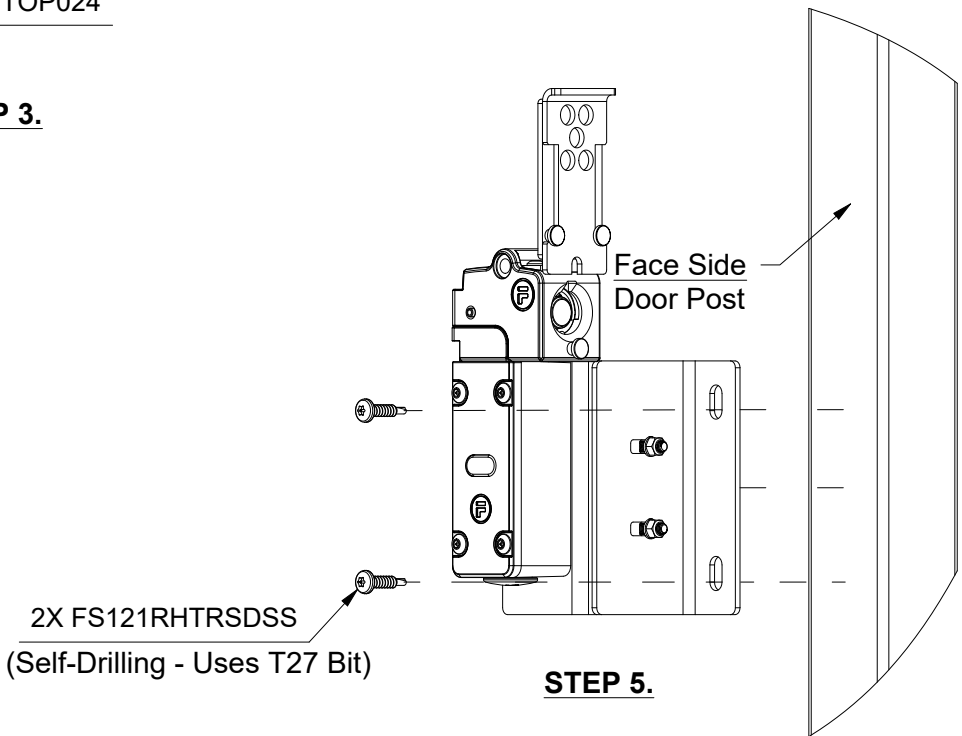

STEP 5.

Thanks for using

WireCrafters

Wire Partition Systems

For more information on WireCrafters products please visit our website at www.wirecrafters.com